

YUME ESPOIR

- Paper template -

- ①Set the dedicated paper template on the floor.
- ②Mark the bolt (anchor) position.
- ③Drill holes at the bolt anchor position.
- ④Remove the paper template.

※The bolt (anchor) position of "chair base" should actually install a chair base, and should check a marking position.

The floor surface requires the following strength:

- Wooden floor : Veneer board with 30 mm thickness or more
- Mortar floor : Mortar thickness of 50 mm or more
- Special floor (stone, etc.) : The base for which the above-stated strength is ensured should be formed in the installation area.

Floor Surface of Tile or Glass Finish

The tiles or glass of the floor surface will break when the bolts are embedded during installation of the shampoo unit. If this is the case, the installation area should be finished with materials such as plywood or mortar.

- ①Peel off the inner tiles or glass along the outside lines of the installation area of the floor. The work must be done carefully; otherwise, the peeled portion may be obvious.
- ②Place composite panels in the peeled-off area.
The panel surface should be higher than the surrounding tile or glass surface (within 2 or 3 mm).

● : Location of the position to connect the main body power plug and power outlet.

● : Floor installation surface.

<About a floor installation surface>
・It shows the part which the leg of a Chair-base installs in a floor.
In order to install the wash unit stably, there needs to be no unevenness in the floor of this part.

○ : Area for power cable installation position.

<The case which installs a power cable individually >
・Please install a power cable from under the floor within the area-[A].
◇Power cable length = 300mm or more

<The case which installs a power cable with water supply pipes and drain pipe>
・Please install a power cable from under the floor within the area-[B].
・Please install shampoo unit so that a power cable passes along the bottom of a Basin-base and a base plate.
◇Power cable length = 1300mm or more

Product dimensions (maximum)

- ・Distance from drain center to seat end is
- For fixed legrest 1585 mm
- (maximum distance with seat back in its upright position)
- For movable legrest 1520 mm
- (maximum distance with seat back down)

Reference installation dimensions

- ・Distance from drain center to wall surface is
- For fixed legrest 2020 mm (including legroom of 435 mm)
- For movable legrest 1970 mm (including legroom of 450 mm)
- ※ Ensure that there is ample space around the footing for extremely tall customers.

Product dimensions

- ・Distance from drain center to basin rear end is 300 mm
- ・Distance from drain center to hose cover rear end 373 mm

Recommended installation dimensions

- ・Distance from drain center to wall surface or furniture is 930 mm or more (including workspace of 630 mm)
- ※ Workspace: Distance from basin rear end to wall surface or furniture (assuming shampoo and treatments performed from behind the basin while sitting on a stool)

TAKARA BELMONT

Version 2

Oct.2015

1E04BTA0

Basin rear end line

[Basin side]

Product center line


Product dimensions:
・Distance from center of product to basin side end is 325 mm
・Maximum width 327 mm
Distance from center of product to end of handrail 327 mm

Recommended installation dimensions

- ・Distance from center of product to wall surface or furniture is 827 mm or more (including workspace of 500 mm)
- ・If multiple YUME ESPOIR are installed interval between center of products 1150 mm or more
- ※ Ensure ample area to walk between seats. (walk way width 500 mm or more)


379

390 (Size of Basin-base)

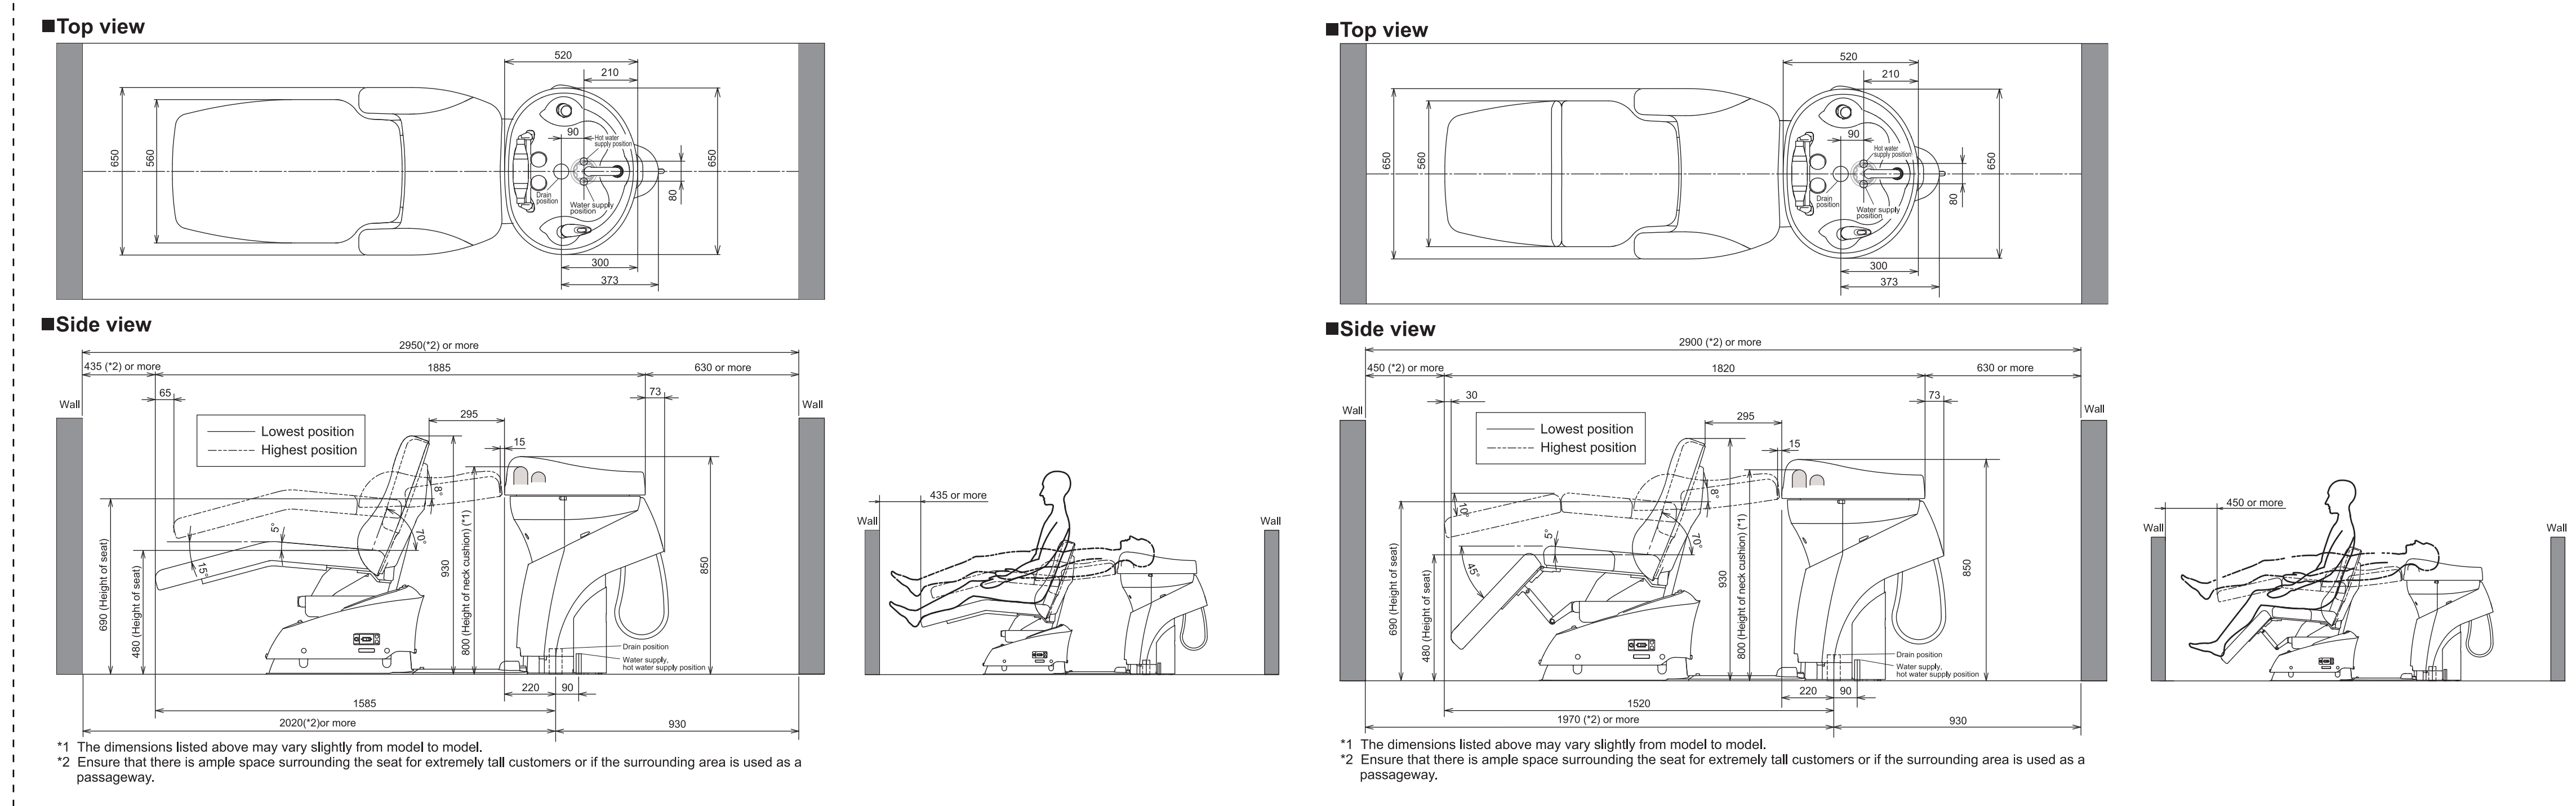

Caution for Anchor Bolt Installation

Anchor bolts should be installed so that the screws will protrude from the bolt head by 3 to 5 mm. If the protrusion exceeds 5 mm, the bolt head may interfere with the cover.

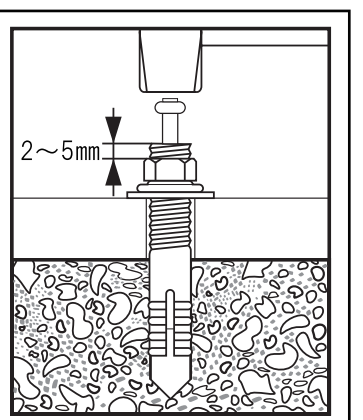

CAUTION

Avoid the anchor positions when installing the pipe risers.